


# Fabritec™ Wall Panels

## Field Cut Electrical Outlet Extension Instructions


### Steps 1-2

1. **Turn off the electricity supplying the electrical outlet!**

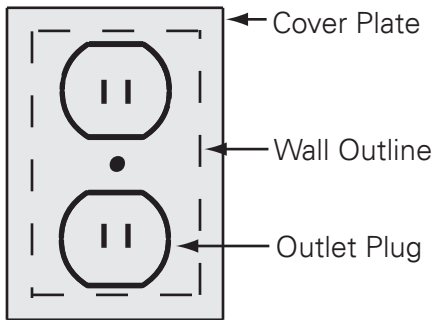


2. Remove the outlet Cover Plate.

### Step 3

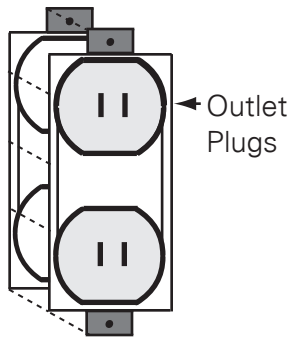

3. Pull the Outlet Plugs away from the wall equal to the thickness of the wall panel.


### Step 4

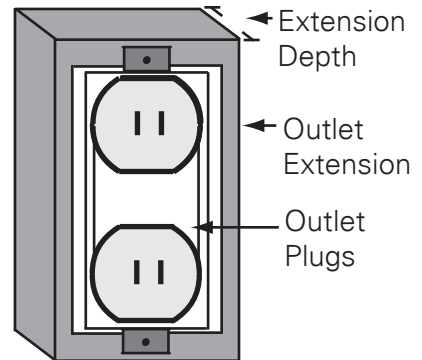

4. Install Outlet Extension per wall outlet instructions. The Extension Depth is equal to the thickness of the wall panel.

### Step 5-7

*Not to scale*

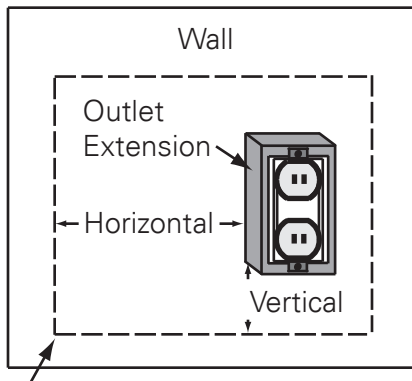

Wall Panel Location


5. Using the Wall, measure the location of the Outlet Extension in reference to its location on the wall panel.

6. Measure the dimensions of the Outlet Extension.

7. Transfer both sets of measurements to the back of the wall panel.

### Step 8


*Wall Panel Back View*  
*Not to scale*

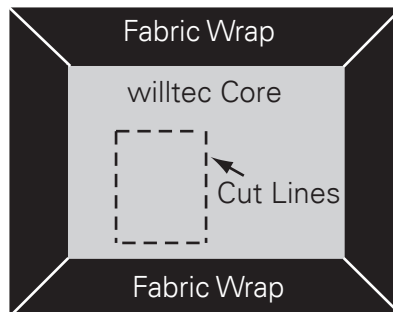

8. Cut out the Outlet Extension outline from the willtec® Core. Use a sharp cutting utensil. Do not cut the Fabric on the front of the wall panel.

### Step 9


*Wall Panel Back View*  
*Not to scale*

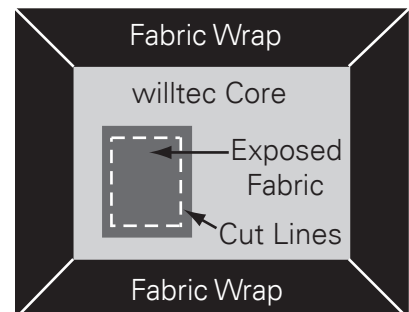

9. Cut a hole in the Exposed Fabric smaller than the hole in the willtec Core.

### Step 10-11

*Not to scale*

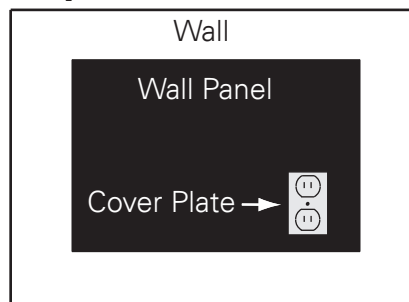

10. Attach the Wall Panel to the Wall.

11. Screw the Cover Plate into place.