


## FABRITEC Wall Panels Installation Instructions

FABRITEC Wall Panels have a lightweight willtec® foam core and are simple to install with a wide range of methods. The panels attach in seconds to existing, clean surfaces. Choose from the mounting options listed.



For ceiling installation instructions, contact pinta acoustic, inc.



acouSTIC adhesive (part number PA-02) is a nontoxic, water-based adhesive that cleans up with soap and water. Each 10.5-ounce tube installs approximately 32 square feet of product. Tubes fit standard caulking guns or can be used with pinta's applicator gun.

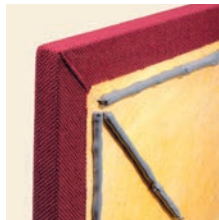

**acouSTIC adhesive installation:**  
Clean wall surface. Apply ¼" bead of adhesive around panel perimeter approximately 1"-1½" from panel edge. Apply a ¼" bead from corner to corner through the center to create an "X." Press panel to surface for 5 seconds. Pull the panel away for approximately 1 minute to allow adhesive to become tacky. Firmly press panel back into position.

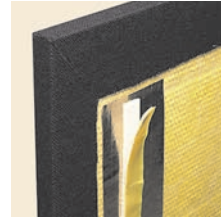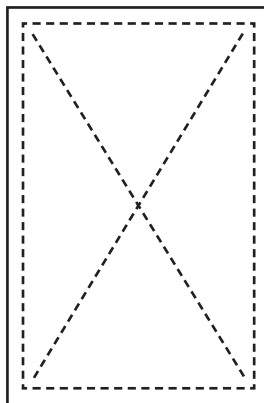

**Hook and loop fastener installation:**  
Prior to shipping, the loop side of the fastener is attached to the panel. The hook side is connected to the loop and has a tape backing. To install, just remove the tape backing and position the panel against the wall. FABRITEC Panels are lighter in weight because they are made with a willtec foam core. This makes installation with pinta's acouSTIC adhesive sufficient for most installations of panels 24" x 48" or smaller in size. For any panel size larger than 24" x 48", we generally recommend using both hook and loop fastener and acouSTIC adhesive.



**Concealed spline installation:**  
Panels come with kerfs along the panel edges and are equipped with a concealed spline attachment. The spline is inserted into one of the panels and installed on the wall. Connecting panels are inserted into the other half of the spline.