
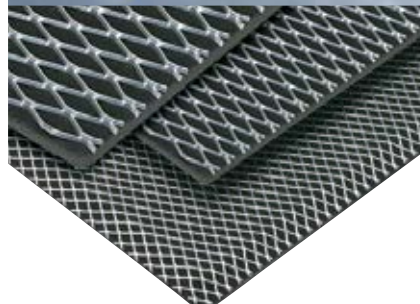
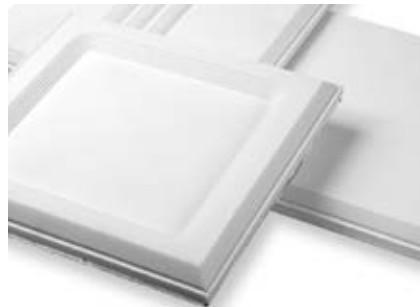


CONTOUR®, HARMONI, WHITELINE® and SONEX® CLEAN Ceiling Tiles Installation Instructions:

- Fits any 15/16" (24 mm) grid systems. (CONTOUR® can also fit 19/16" [14 mm]).
- Ceiling tiles simply drop into place.
- Press tiles from above to snap into grid. Do not pull from face (CONTOUR and HARMONI).
- Wear clean, cotton or canvas gloves to handle tiles for installation.
- When retrofitting a current installation of 24" x 48" (609 x 1219 mm) lay-in panels, you will need to install cross-tees to accommodate the 24" x 24" (609 x 609 mm) pinta ceiling tiles.
- For HARMONI installations, maintain uniform temperature of minimum 60°F (16°C) and minimum humidity of 40 percent prior to, during and after installation.

SQUARELINE® Metal Ceiling Tiles Instructions:

- SQUARELINE Metal Ceiling Tiles simply drop into place.
- Fits 15/16" (24 mm) heavy-duty conventional grid systems.
- Wear clean, cotton or canvas gloves during installation. Latex gloves are NOT recommended as tiles can have sharp edges.
- For SQUARELINE Metal Ceiling Tiles, best results are achieved when cutting is done with professional metal-cutting tools.

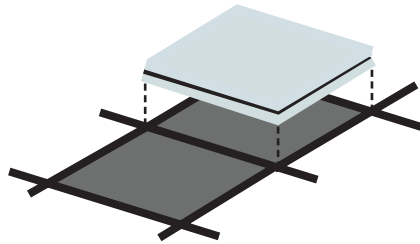

General Installation Notes:

- For CONTOUR, HARMONI or WHITELINE® tiles, best results are achieved when cutting is done from the back side.
- Be sure to lay tiles on a clean surface before cutting.
- For best results, use a sharp razor or fixed-blade knife and metal straightedge. Use a sharp blade long enough to penetrate through thickness of panel with a single smooth stroke.
- Alternately, an electric carving knife is the perfect tool for cutting and trimming CONTOUR, HARMONI and WHITELINE Ceiling Tiles.
- When making free-hand cuts to fit the tiles around an obstruction, it is usually better to undersize the cut, then test-fit and trim off more of the tile as needed for an accurate fit.
- Store all cartons right-side up and at in a clean, dry area, enclosed and protected from the elements such as rain, snow and excessive heat or cold.
- Do not sit on or stack any materials on top that could crush protective shipping cartons. This may cause damage to the product.
- Do not open shipping cartons or remove ceiling tiles until ready to install.
- Installation is best done at the end of the construction project.