

Linear Absorber, C-channel Installation Guide




Applications

- Flat or sloped ceilings and walls
- Recessed pocket areas within drywall surrounds
- Create or suit ceiling elevation changes
- Tailor depths of linear sections by design, plan and dimension
- Peak visual interest within various spaces

Installation

- First fasten the C-channel directly to the wall or ceiling substrates
- Run a continuous bead of acouSTIC™ adhesive within the C-channel before slip-fitting linear absorber into the C-channel
- Before butting linear absorbers tight in continuous rows, apply short beads of acouSTIC adhesive to linear absorber ends; then spread using a 1-inch (25 mm) putty knife

Ceiling Elevations

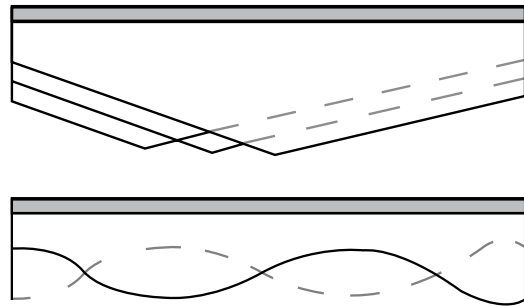

Ceiling Sections

